



Dynamic[®]
BITE ALARM SET


BITE ALARM

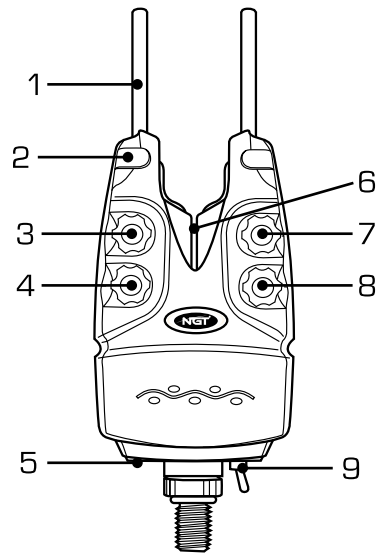

BITE ALARM

- 1 Snag Bar
- 2 Multi-colour LED Lights
- 3 Tone Dial (5 settings)
- 4 Multi-colour LED Dial (7 colour options)
- 5 Power Socket
- 6 Roller
- 7 Volume Dial
- 8 Sensitivity Dial (5 settings)
- 9 Power Switch (on/off/night light)

RECEIVER

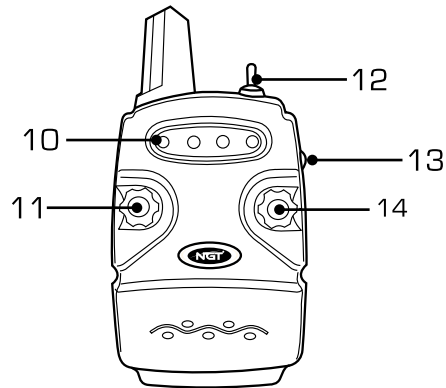

RECEIVER

- 10 LED Lights
- 11 Tone Dial (5 settings)
- 12 Power Switch (on/off/vibrate)
- 13 Coding Dial
- 14 Volume Dial

BATTERY INSTALLATION

Install a 9-volt battery in each of the alarms and the receiver by sliding down the battery cover plate on the back of each unit.

SYNCHRONISING ALARM SEQUENCE WITH RECEIVER LED ORDER

- Step 1 Make sure the sensitivity dial is set to 1.
- Step 2 Turn ON alarm and turn receiver OFF.
- Step 3 Press and hold the 'Coding Button' on the receiver and turn ON.
- Step 4 Release 'Coding Button' on the receiver and press again to change the LED order.
- Step 5 Trigger the alarm and turn receiver OFF and ON.

RANGE TEST

- Step 1 Turn ON Receiver.
- Step 2 With the bite alarm powered off turn the sensitivity dial to '5'.
- Step 3 Turn the bite alarm ON - Audible alarm noise indicates alarm range.
- Step 4 Quit the range test by turning OFF alarm.

LOW BATTERY

Each alarm unit utilizes a low battery alarm is indicated by a short beep.

MAINTENANCE

Wipe alarms and receiver unit after each use. Remove moisture and debris with a dry clean cloth. For long storage periods remove batteries.

Note: NGT Dynamic Bite Alarms are supplied pre-paired.

WHEN TURNING OFF YOUR BITE ALARMS, MAKE SURE THE SENSITIVITY SETTING IS BETWEEN 1-3. FAILING TO DO SO WILL RESULT IN THE ALARMS GOING INTO RANGE MODE THE NEXT TIME YOU SWITCH THEM ON.